Operator's manual (EPA III)
Manuel d'utilisation (EPA III)
Manual de instrucciones (EPA III)

445 445e 450e

Please read the operator's manual carefully and make sure you understand the instructions before using the machine.

Lire attentivement et bien assimiler le manuel d'utilisation avant d'utiliser la machine.

Lea detenidamente el manual de instrucciones y asegúrese de entender su contenido antes de utilizar la máquina.

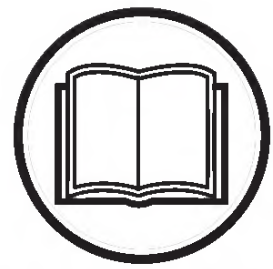

English (2-43)
French (44-87)
Spanish (88-129)

115 13 81-49 Rev.1 2009-02-13

Downloaded from www.Manualslib.com manuals search engine

Français

Fonctions du clavier

Touches de fonction avancées

Pour utiliser les touches de fonctions avancées, appuyez sur la touche Fn sans la relâcher, puis sur la touche F de votre choix.

Fn + F1 = Lance le navigateur Web
Fn + F2 = Lance l'application de messagerie électronique
Fn + F3 = Lance le service de recherche Windows[1]
Fn + F4 = Lance le lecteur multimédia
Fn + F5 = Bascule l'application[2]
Fn + F6 = Affiche le bureau
Fn + F7 = Réduit la fenêtre active
Fn + F8 = Restaure les fenêtres réduites
Fn + F9 = Ouvre le Poste de travail
Fn + F10 = Verrouille l'ordinateur
Fn + F11 = Met l'ordinateur en veille
Fn + F12 = Lance la calculatrice

Pour reprogrammer les touches de fonctions avancées, utilisez le logiciel Logitech® SetPoint™, téléchargeable sur le site www.logitech.com/downloads.

[1] Fonction One Touch Search disponible si le logiciel SetPoint est installé.
[2] Fonction de changement d'application disponible si le logiciel SetPoint est installé.

Touches de raccourci

1. Navigation multimédia
2. Réglage du volume

Português

Recursos do teclado

Teclas F otimizadas

Para usar as teclas F otimizadas, mantenha pressionada a tecla Fn e pressione a tecla F que deseja usar.

Fn + F1 = Inicia o navegador da Internet
Fn + F2 = Inicia o aplicativo de e-mail
Fn + F3 = Inicia a Pesquisa do Windows[1]
Fn + F4 = Inicia o media player
Fn + F5 = Inverter[2]
Fn + F6 = Mostra a área de trabalho
Fn + F7 = Minimiza a janela
Fn + F8 = Restaura janelas minimizadas
Fn + F9 = Meu computador
Fn + F10 = Bloqueia o PC
Fn + F11 = Coloca o PC em modo de espera
Fn + F12 = Inicia a calculadora

Para reprogramar as teclas F, use o software Logitech® SetPoint™, que pode ser descarregado a partir do site www.logitech.com/downloads.

[1] One Touch Search, se o software SetPoint estiver instalado.
[2] Alternância de aplicativos, se o software SetPoint estiver instalado.

Teclas de acesso

1. Navegação de mídia
2. Ajuste de volume

English

Help with setup

- Is the keyboard powered on?
- Is the Unifying receiver securely plugged into a computer USB port? Try changing USB ports.
- If the Unifying receiver is plugged into a USB hub, try plugging it directly into a USB port on your computer.
- Did you pull the battery tab? Check the orientation of the batteries inside the keyboard, or replace the two AA alkaline batteries.
- Remove metallic objects between the keyboard and its Unifying receiver.
- Try moving the keyboard closer to the Unifying receiver, or order a USB extension cable at www.logitech.com/usbextender.
- Try reconnecting the keyboard and Unifying receiver using the Logitech Unifying software (Refer to the Unifying section in this guide.)

Español

Ayuda con la instalación

- ¿Has encendido el teclado?
- ¿Está el receptor Unifying conectado correctamente a un puerto USB de la computadora? Prueba otros puertos USB.
- Si el receptor Unifying está conectado a un concentrador USB, conéctalo directamente a un puerto USB de la computadora.
- ¿Tiraste de la lengüeta de las baterías? Comprueba la orientación de las baterías dentro del teclado, o sustituye las dos baterías alcalinas AA.
- Retira cualquier objeto metálico situado entre el teclado y el receptor Unifying.
- Lleva el receptor Unifying más cerca del teclado, o encargue un cable de extensión USB en www.logitech.com/usbextender.
- Vuelve a conectar el teclado y el receptor Unifying mediante el software Logitech Unifying (consulta la sección Unifying de esta guía).

Français

Aide pour l'installation

- Le clavier est-il sous tension?
- Le récepteur Unifying est-il branché sur un port USB? Réessayez en changeant de port USB.
- Si le récepteur Unifying est branché sur un hub USB, branchez-le directement sur un port USB de l'ordinateur.
- Avez-vous retiré la languette de protection des piles? Vérifiez le sens d'insertion des piles dans le clavier ou remplacez les deux piles alcalines AA.
- Déplacez tout objet métallique se trouvant entre le clavier et le récepteur Unifying.
- Essayez de rapprocher le clavier du récepteur Unifying ou commandez une rallonge USB à l'adresse www.logitech.com/usbextender.
- Essayez de reconnecter le clavier au récepteur Unifying par le biais du logiciel Logitech Unifying (reportez-vous à la section Unifying de ce guide)

Português

Ajuda para a configuração

- O teclado está ligado?
- O receptor Unifying está conectado corretamente a uma porta USB do computador? Experimente uma outra porta USB.
- Se o receptor Unifying estiver conectado a um concentrador USB, tente conectá-lo diretamente a uma porta USB no computador.
- Abriu o compartimento de pilhas? Verifique a orientação das pilhas no teclado ou substitua as duas pilhas alcalinas AA.
- Remova objetos metálicos entre o teclado e o receptor Unifying.
- Tente mover o teclado para mais perto do receptor Unifying ou encomende um cabo de extensão USB em www.logitech.com/usbextender.
- Tente reconectar o teclado e o receptor Unifying usando o software Logitech Unifying (consulte a seção Unifying neste guia).

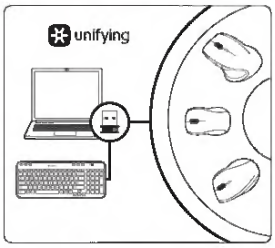

English

Plug it. Forget it. Add to it.

Your new Logitech product ships with a Logitech® Unifying receiver. Did you know you can add a compatible Logitech wireless device that uses the same receiver as your current Logitech Unifying product?

Are you Unifying-ready?

If you have a Logitech wireless device that's Unifying-ready, you can pair it with additional Unifying devices. Just look for the orange Unifying logo on the new device or its packaging. Build your ideal combo. Add something. Replace something. It's easy, and you'll use only one USB port for up to six devices.

Getting started is easy

If you're ready to pair your device(s) via Unifying, here's what you need to do:

1. Make sure your Unifying receiver is plugged in.
2. If you haven't already, download the Logitech® Unifying software from www.logitech.com/unifying.
3. Start the Unifying software* and follow the onscreen instructions to pair the new wireless device with your existing Unifying receiver.

*Go to Start / All Programs / Logitech / Unifying / Logitech Unifying Software

Español

Conéctalo. Olvídate de él. Agrega más.

Tu nuevo producto Logitech se entrega con un receptor Logitech® Unifying. ¿Sabías que puedes agregar un dispositivo inalámbrico Logitech compatible que utiliza el mismo receptor que tu producto Logitech Unifying actual?

¿Estás listo para Unifying?

Si tienes un dispositivo inalámbrico compatible con Unifying, puedes emparejarlo con otros dispositivos Unifying. Sólo debes buscar el logo naranja de Unifying en el nuevo dispositivo o en su embalaje. Crea la combinación ideal. Agrega algo. Sustituye algo. Es sencillo: sólo utilizarás un puerto USB para hasta seis dispositivos.

Es muy sencillo

Si estás listo para emparejar los dispositivos mediante Unifying, sigue estos pasos:

1. Comprueba que el receptor Unifying esté conectado.
2. Si no lo has hecho aún, descarga el software Logitech® Unifying desde www.logitech.com/unifying.
3. Inicia el software* Unifying y sigue las instrucciones en pantalla para emparejar el nuevo dispositivo inalámbrico con el receptor Unifying existente.

*Ve a Inicio / Todos los programas / Logitech / Unifying / Software Logitech Unifying

Français

Branchez-le. Oubliez-le. Ajoutez d'autres périphériques.

Votre nouveau produit Logitech est livré avec un récepteur Logitech® Unifying. Saviez-vous qu'il est possible d'ajouter un dispositif sans fil Logitech compatible utilisant le même récepteur que votre produit Logitech Unifying?

Etes-vous compatible Unifying?

Si vous disposez d'un dispositif sans fil Logitech compatible Unifying, il est possible de l'associer à d'autres dispositifs Unifying. Recherchez le logo Unifying de couleur orange sur le nouveau dispositif ou son emballage. Créez votre combinaison parfaite. Ajoutez un dispositif. Remplacez-en un. C'est facile et un seul port USB peut permettre de connecter jusqu'à six dispositifs.

Installation facile

Si vous êtes prêt à associer votre ou vos dispositifs via le récepteur Unifying, voilà comment procéder:

1. Assurez-vous que votre récepteur Unifying est connecté.
2. Si vous ne l'avez pas encore fait, téléchargez le logiciel Logitech® Unifying à l'adresse www.logitech.com/unifying.
3. Lancez le logiciel Unifying* et suivez les instructions à l'écran de façon à associer le nouveau dispositif sans fil avec le récepteur Unifying existant.

*Cliquez sur Démarrer / Tous les programmes / Logitech / Unifying / Logiciel Logitech Unifying

Português

Conecte-o. Esqueça-o. Adicione a ele.

Seu novo produto da Logitech inclui um receptor Logitech® Unifying. Sabia que você pode adicionar um dispositivo sem fio compatível da Logitech que usa o mesmo receptor que o produto Logitech Unifying?

Está preparado para Unifying?

Se tiver um dispositivo sem fio da Logitech que esteja preparado para Unifying, você poderá emparelhá-lo com dispositivos Unifying adicionais. Para ter certeza, procure o logotipo Unifying laranja no novo dispositivo ou na embalagem. Faça sua combinação ideal. Adicione algo. Substitua algo. É fácil, e somente uma porta USB será usada para até seis dispositivos.

É fácil começar

Se estiver pronto para emparelhar dispositivos através do Unifying, aqui está o que é preciso fazer:

1. Verifique se o receptor Unifying está conectado.
2. Se ainda não o tiver, faça o download do software Logitech® Unifying no site www.logitech.com/unifying.
3. Inicie o software* Unifying e siga as instruções na tela para emparelhar o novo dispositivo sem fio com o receptor Unifying existente.

*Vá para Iniciar / Todos os programas / Logitech / Unifying / Logitech Unifying Software

What do you think?
¿Cuál es su opinión?
Qu'en pensez-vous?
O que você acha?

Please take a minute to tell us. Thank you for purchasing our product.

Nos gustaría conocerla, si puede dedicarnos un minuto. Le agradecemos la adquisición de nuestro producto.

Prenez quelques minutes pour nous faire part de vos commentaires. Vous venez d'acheter ce produit et nous vous en remercions.

Reserve um minuto para nos dizer. Obrigado por adquirir nosso produto.

www.logitech.com/ithink

www.logitech.com/support

United States	+1 646-454-3200
Argentina	+00800-555-3284
Brasil	+0 800-891-4173
Canada	+1 866-934-5644
Chile	1230 020 5484
Latin America	+1 800-578-9619
Mexico	001 800 578 9619

M/N:C-U0007
Rating: 5V ⎓ 100mA
FCC ID: JNZCU0007
IC: 4418A-CU0007
MADE IN CHINA
2205-10-3229
CNC:C-8941 CET:RCPLOCU10-1356

Downloaded from www.Manualslib.com manuals search engine

Preface

This guide is for the networking professional who installs and manages the Ziwell AWAP08O-11gHP outdoor product, hereafter referred to as the "device". To use this guide, you should have experience working with the TCP/IP configuration and be familiar with the concepts and terminology of wireless local area networks.

6 OPERATIONS

Calling: – Momentarily press CALL button on door station.
After room station replies, talk handsfree in front of camera.

7 TECHNICAL PRECAUTIONS

Caulking seals: Do not apply any caulking seals around video door station. Water drainage holes on bottom will help water or moisture to dissipate.

Cleaning: Clean MK-DAC/DBC/DGC with a soft cloth dampened with neutral household cleanser. Never use any harsh cleaner and cloth. Do not spray high-pressure water on video door station.

8 SPECIFICATIONS

Power source: Supplied by master station.

Consumption: 370mA (max.). 4.5mA (Standby) (approx.)

Picture element: CCD camera.

Image view area (approx.):

	Vertical	Horizontal	Vertical	Horizontal
In horizontal position:	45cm	65cm	18"	28"
When pan-and-tilted:	90cm	180cm	3'	8'

Min. illumination: Less than 1 Lux (at 50cm / 20" from camera).

Ambient temperature: –10°C ~ 60°C (14°F ~ +140°F).

Wiring: 2 parallel wires, non-polarized to master.

Wiring distance:

Diameter	0.65mmø	1.0mmø	AWG	22AWG	18AWG
DISTANCE	50m	100m	DISTANCE	165'	330'

Unit housing & color: Fire-retardant plastic in black.

Dimensions: MK-DAC: 98 W x 130 H x 47.5 D (mm). (3-1/8"W x 5-1/8"H x 1-7/8"D)
MK-DBC: 115 W x 172H x 31.5 D (37 in recess) (mm). (4-1/2"W x 6-3/4"H x 1-1/4"D) (1-1/2" in recess)
MK-DGC: 114 W x 170H x 31.5 D (37 in recess) (mm). (4-1/2"W x 6-11/16"H x 1-1/4"D) (1-1/2" in recess)

Weight (approx.): MK-DAC: 240g(0.53 lbs.). MK-DBC: 350g(0.77 lbs.). MK-DGC: 410g(0.91 lbs.).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Increase the separation between the equipment and receiver. • Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

Aiphone warrants its products to be free from defects of material and workmanship under normal use and service for a period of two years after delivery to the ultimate user and will repair free of charge or replace at no charge, should it become defective upon which examination shall disclose to be defective and under warranty. Aiphone reserves unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship; and whether or not the product is within the warranty.
This warranty shall not apply to any Aiphone product which has been subject to misuse, neglect, accident, or to use in violation of instructions furnished, nor extended to units which have been repaired or altered outside of the factory. This warranty does not cover batteries or damage caused by batteries used in connection with the unit.
This warranty covers bench repairs only, and any repairs must be made at the shop or place designated in writing by Aiphone. Aiphone will not be responsible for any costs incurred involving on site service calls.

AIPHONE CO., LTD., NAGOYA, JAPAN
AIPHONE CORPORATION, BELLEVUE, WA, USA
AIPHONE EUROPE N.V., ANTWERP, BELGIUM

AIPHONE®

MK-DAC-I (E) 0500B

Printed in Japan (E)

Downloaded from www.Manualslib.com manuals search engine

SUBJECT **PAGE**

6. INSTALLATION **67**
Introduction 67
Connections (general) 68
Rear Panel Layout 69
Connector Pin Allocations :-
Resolvers 70
Motor Control 71
Stp-Trk / Alarms 72
Communication Ports 72
Remote Port 72
Test Ports 73
Serial Port RS422/423 Setting 74
Serial Port Usage 74
Tracking Signal Connections 75
Resolvers (pointing angles) 75
Southern Hemisphere 76
Tracking Signal Input 76
With IBR-L 76
Without IBR-L 76
Operational Checks 77

7. FAULT FINDING **79**
Introduction 79
Fault Symptoms :-
INTRAC doesn't appear to power up 80
Replacing display back-light 80
Front panel keys do not function 82
Emergency Stop does not function 82
Pointing angles incorrect 82
No antenna drive 83
No tracking signal 84

8. WARRANTY & REPAIR **85**
Warranty 85
Repair Service 85
Repairs not under Warranty 86

APPENDICES ..... See separate appendices index 87

Downloaded from www.Manualslib.com manuals search engine

Start
Remove the back cover
Put in the SIM cards
Put in the optional memory card
Power on
Dual SIM card settings (for dual SIM phones)
Battery life
Sign in
Old phone to new phone
Google Play™

Dual SIM card settings (for dual SIM phones)

With a dual SIM phone, you can use one or two SIM cards. If there's only one SIM in the phone, it's ready to use. With two cards inserted, you can use either or both.

To set up your phone to use two SIM cards, insert both cards, turn on your phone, and follow the prompts. To finish dual SIM setup, drag down the status bar at the top of the home screen and touch **Welcome to your dual SIM**.

Tip: With two SIM cards, you see at the top of your home screen.

Dual SIM with intelligent calling

Your phone learns your usage patterns to choose the best SIM for an outgoing call. You phone automatically prompts you in the status bar to enable this feature. Or, you can enable it anytime by touching Apps → **Settings** → **Dual SIM settings** → **Call settings** → **Automatic SIM selection**.

Battery life

Your phone is like a small computer, giving you tons of information and apps, at lightning fast speed. Depending on what you use, that can take a lot of power.

To see what's using up battery power, touch Apps → **Settings** → **Battery**.

Tips & tricks

To save even more battery life between charges, you could reduce:

- Wi-Fi and Bluetooth® use: Touch Apps → **Settings**, then touch the switch next to **Wi-Fi** or **Bluetooth** to turn them OFF when you don't need them.
- GPS use: Touch Apps → **Settings** → **Location** → **Mode** → **Battery saving** to turn off GPS tracking.
- Display brightness: Touch Apps → **Settings** → **Display** → **Brightness** → (slide dimmer setting left), if you don't want to use the automatic light sensor.
- Display timeout delay: Touch Apps → **Settings** → **Display** → **Sleep** → (shorter setting).
- Widgets that stream information to your home screen, like news or weather.
- Unused online accounts that you registered: Touch Apps → **Settings**. Go to the **ACCOUNTS** section, and touch the one you want to remove. Touch it again, then touch Menu → **Remove account**.
- Recording or watching videos, listening to music, or taking pictures.

Downloaded from www.Manualslib.com manuals search engine

Download Program
This menu item is used to select the channel from which to retrieve the correct time from the Teletext. When this item is selected the television set tunes to the selected program.

Time Offset
This menu item is used to set the offset needed to adjust the time received from the Teletext channel to represent the current time in the current location.

- **Brightness**
  The brightness control contains 63 discrete values from the minimum to maximum setting.

- **Colour**
  The colour control contains 63 discrete values from the minimum to maximum setting.

- **Contrast**
  The contrast control contains 63 discrete values from the minimum to maximum setting.

- **Sharpness**
  The sharpness control contains 63 discrete values from the minimum to maximum setting.

- **Forced mono (for stereo televisions only)**
  This command is used to activate or deactivate the stereo feature in stereo sets. Toggle YES, NO using the right/left cursor.

- **Balance (for stereo televisions only)**
  To balance the output sound from TELEVISION's speakers left and right

- **Treble (for stereo televisions only)**
  To set the treble frequencies of sound output from TELEVISION's speakers.

- **Bass (for stereo televisions only)**
  To set the bass frequencies of sound output from television's speakers.

- **AVL (Automatic Volume Leveller)**
  The Automatic Volume Leveller feature is shown as "AVL" in the menu and its valid states are "YES"; "NO".

- **Volume Fixed**
  The valid toggle states are "YES" and "NO": if YES, the volume is fixed at a certain volume, if NO, the volume contains 63 discrete values.

- **Volume Bar**
  To display volume bar when adjusting volume, select "YES". Select "NO" to hide the bar.

- **Min Volume**
  This item sets the limit for minimum volume allowed for the television set. Use right/left cursor to adjust.

- **Max Volume**
  This item sets the limit for the maximum volume allowed for the television set. Use right/left cursor to adjust.

- **Switch on Volume**
  This item sets the television's volume at switch on. Use the right/left cursor to adjust.

- **Buzzer Volume**
  This item sets the volume of the alarm buzzer. Use the right/left cursor to adjust.

- **Switch On Program**
  This item sets the television's program at switch on

- **Power On**
  The Power On menu function defines the behaviour of the television whenever AC Power is applied.
  The valid states are "FORCED", "STANDARD" and "STANDBY".
  When "FORCED", the television can only be switched OFF by means of the main switch or a set-up remote control or by ESP function (Energy Saving Programmability controls the maximum continuous viewing time allowed by the control system).
  When "STANDARD", the television switches on the previous status, ON or Stand-by.
  When "STAND-BY", the television always switches on in Stand-by.

- **Step Tuning (YES/NO)**
  If YES, TV programs (1 to 9) are tuned immediately when a digit is pressed.
  If NO, tuning is performed only after the dash disappears.

- **Digit Time-out**
  This is the time-out to enter the second digit for TV program 10 onwards.

Downloaded from www.Manualslib.com manuals search engine

Disposal of your old product.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 22002/96/EC. Please find out more about the separate collection system for electrical and electronic products in your local neighborhood.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

The packaging of this product is intended to be recycled. Apply to the local authorities for correct disposal.

2007© Koninklijke Philips Electronics N.V. all rights reserved
Specifications are subject to change without notice
Trademarks are property of Koninklijke Philips Electronics N.V. or their respective owners.

Más módszer: Automatikus tárolás

1 Nyomja le egyszerre a ◇◇ gombokat, hívja elő az INSTALLATION (Indítás) menüt.
2 A ⊟ gomb segítségével hívja le az AUTO STORE (Automatikus tárolás) menüt.
3 Csak egyes modellek esetében. Válassza ki a (WEST . EUR vagy EAST . EUR) rendszert (⊟ gomb).
4 A ⊞ gomb lenyomásával elindítja az összes hozzáférhető program automatikus tárolását.
Megjelenik a SEARCHING (Keresés) felirat. A keresés néhány percig tart.
5 Ha a keresés befejeződött, újból megjelenik az INSTALLATION menü. A megtalált programok a 69, 68, ... stb. sorrendben számozódnak meg. Most elkezdheti az egyes programok tetszés szerinti átszámozását.

Ha át kívánja számozni a programokat:

1 A ⊞ gombbal jelölje meg a MANUAL STORE (Kézi tárolás menüt).
2 A ⊖ P ⊕ gombokkal jelölje meg azt a programot, melyet át kíván számozni.
3 Nyomja meg a ◇◇ gombokat, a szám villogni kezd.
4 Adja meg a kívánt programszámot (a ⊖ P ⊕ gombok).
5 A ◇◇ gombok segítségével az új szám beíródik a memóriába.
Megjelenik a STORED (Tárolva) felirat, az új programszámot a memória tárolja.
A lépéseket ismételje meg annyiszor, ahány programot át akar számozni.

Ha ki akar lépni az INSTALLATION menüből, nyomja le kétszer a MENU gombot.

A tavvezérló használata:

Nyomja le:	Az eredmény:
Készenléti helyzet	A képernyő sötét, a jelzőlámpa pirosan ég tovább. Ha újra be akarja kapcsolni a készüléket, nyomja le a ⊖ P ⊕ gombokat.
Programválasztás	A program száma megjelenik a képernyőn, az előző programokat a (-), a következőket a (+) gombbal hívja le.
Számozott gombok	Ha megjelenik a szám, a program ki lett választva. Ha a program kétszámjegyű, a második számot addig üsse be, mielőtt még a vonal eltűnik.
Hangerősség	A hangerősség megváltozott
A hang kikapcsolása	A hang ki- és bekapcsolása
Men	Az adott gombok lenyomásával megkapjuk a következő beállításokat: ◿ (hangerősség), ☼ (fényerő), ◑ (kontraszt), ◧ (képélesség), ✿ (színtelítettség) a ⏲ (automata-kapcsoló).
Beállítás vagy a men beállítása	Ez a funkció kiválasztott menüt modifikálja. A ⏲ automata-kapcsoló esetében meg kell adni egy adott időtartamot, melynek leteltével a televízió készenléti helyzetbe kapcsol át (0-tól 24 óráig). Ha a televíziót készenléti helyzetbe helyezi, az magától bekapcsol, ha eltelik a megadott időtartam.
A beállítás tárolása	Előbb hívja le a menüket: ◿, ☼, ◑, ◧ vagy ✿, utána nyomja le a két ◇◇ gombot. Megjelenik a STORED (Tárolva) felirat. Mindegyik beállítás automatikusan a memóriába kerül, az automata-kapcsolót kivéve.
Személyes preferenciák	Megjelennek a tárolt beállítások
Információk a képernyőn?	A programszám és az automata-kapcsolóban hátramaradt idő megjelenítése vagy törlése.
A hang beállítása	Nincs ilyen funkció.

Downloaded from www.Manualslib.com manuals search engine

Oven accessories

The oven is provided with the following accessories:

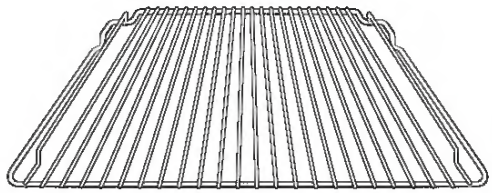

Wire shelf

For ovenware, cake tins, roasts and grilled items

Universal sheet

For moist cakes, juicy roasts or as a baking sheet or collecting vessel for fat

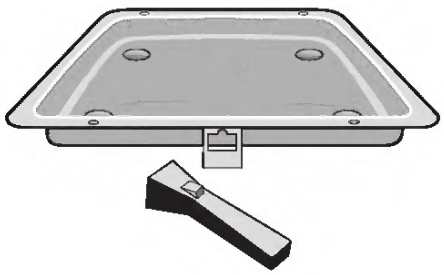

Grill pan with handle

Support for the grill tray as a collecting vessel for fat

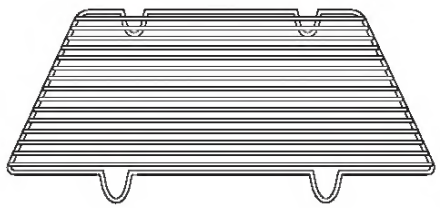

Grill pan tray

Insert for the grill pan for grilling smaller amounts of grilled food

Downloaded from www.Manualslib.com manuals search engine